


Fußstütze FOTSTÖD

passend für den
IKEA ANTILOP Hochstuhl

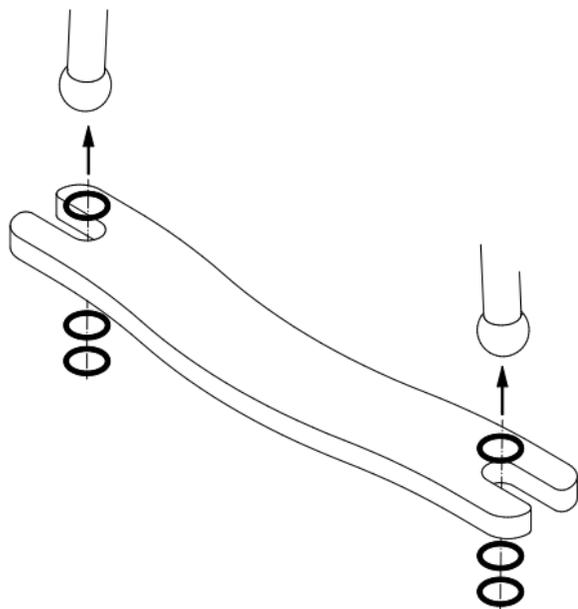

Achtung: Sicherheitshinweise Sorgfältig lesen & aufbewahren

- Bitte bewahre unbenutzte Gummiringe außerhalb der Reichweite von Kindern auf. Die kleinen Ringe sind kein Spielzeug und könnten vom Kind verschluckt werden.
- Die Fußstütze darf mit dem IKEA ANTILOP Hochstuhl nur verwendet werden, wenn das Kind mit dem Sicherheitsgurt fest angeschnallt ist.
- Die Fußstütze darf ausschließlich unter Aufsicht von Erwachsenen genutzt werden.
- Die Fußstütze ist keine Trittstufe und kann nicht das komplette Gewicht eines Kindes tragen. Sie trägt lediglich das Gewicht der Beine des Kindes. Aus diesem Grund lässt sich die Fußstütze nach Gebrauch leicht aushängen, wenn Gefahr besteht, dass Kinder daran hochklettern können.

Aufbauanleitung

Reinige die beiden vorderen Hochstuhlbeine und achte darauf, dass diese staubfrei sind. Rolle nun von unten drei Gummiringe über die runden Füße der beiden vorderen Stuhlbeine. Am einfachsten ist es, wenn du den Stuhl auf den Boden legst.

Stelle jetzt den Stuhl wieder auf. An jedem Bein positionierst du einen Ring im oberen Drittel und zwei im unteren Drittel. Stecke das eine Ende der Fußstütze zwischen die Ringe eines Stuhlbeins. Auf der anderen Seite kannst du es einklemmen indem du die Fußstütze diagonal hältst. Anschließend kannst du die Fußstütze waagrecht ausrichten. Nun rolle die unteren Gummiringe bis zur Fußstütze nach oben. Die oberen Gummiringe rollst du bis zur Oberkante der Fußstütze ab.

Hochstühle mit Fußstützen sind wichtig, um deinem Kind eine korrekte Körperhaltung und Ergonomie zu ermöglichen. Stelle die Höhe der Fußstütze entsprechend der Körpergröße deines Kindes ein. Die Beine des Kindes sollten einen Winkel von 90° haben.



Attention: Safety Instructions Read & store carefully

- Please keep unused rubber rings out of children's reach. The small rings are not a toy and could be swallowed by children.
- The footrest may only be used with the IKEA ANTILOP highchair if the child is secured with the safety belt.
- The footrest may only be used under the supervision of an adult.
- The footrest is not a footstep and cannot carry the full weight of a child. It only supports the weight of the child's legs. Therefore, the footrest can be easily removed after use if there is a potential risk that children could climb up on it.

Installation instructions

Clean the two front legs of the highchair and make sure that they are free from dust. Now roll three rubber rings from below over the rounded feet of the two front chair legs. The easiest way is by putting the chair on the floor.

Now put the chair back in place. Position one ring on each leg in the upper third and two in the lower third. Insert one end of the footrest between the rings of one chair leg. On the other side you can clamp it by holding the footrest diagonally.

Then you can level the footrest. Now roll the lower rubber rings up to the footrest. Roll the upper rubber rings down to the upper edge of the footrest.

Highchairs with footrests are important to enable your child to maintain a correct posture and ergonomics. Adjust the height of the footrest according to your child's height. Your child's legs should have an angle of 90°.



Limmeland GmbH & Co. KG

Marzellenstr. 43a
50668 Köln
Deutschland

www.limmeland.com

LIMMALAND